

# User's manual (short)



**NVIP-2DN5000H/IR-1P**  
**NVIP-3DN5000H/IR-1P**  
**NVIP-5DN5000H/IR-1P**

**NoVus®**

<http://www.e-camera.ro/camera-supraveghere-ip/Novus/NVIP-5DN5000H-IR-1P>

## IMPORTANT SAFEGUARDS AND WARNINGS

### EMC (2004/108/EC) and LVD (2006/95/EC ) Directives



Our products are manufactured to comply with requirements of the following directives and national regulations implementing the directives:

- Electromagnetic compatibility EMC 2004/108/EC.
- Low voltage LVD 2006/95/EC with further amendment. The Directive applies to electrical equipment designed for use with a voltage rating of between 50VAC and 1000VAC as well as 75VDC and 1500VDC.

### WEEE Directive 2002/96/EC



#### Information on Disposal for Users of Waste Electrical and Electronic Equipment

This appliance is marked according to the European 1000VAC Directive on Waste Electrical and Electronic Equipment (2002/96/EC) and further amendments. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or the documents accompanying the product, indicates that this appliance may not be treated as household waste. It shall be handed over to the applicable collection point for used up electrical and electronic equipment for recycling purpose. For more information about recycling of this product, please contact your local authorities, your household waste disposal service or the shop where you purchased the product.

### RoHS Directive 2002/95/EC



Out of concern for human health protection and friendly environment, we assure that our products falling under RoHS Directive regulations, regarding the restriction of the use of hazardous substances in electrical and electronic equipment, have been designed and manufactured in compliance with the above mentioned regulations. Simultaneously, we claim that our products have been tested and do not contain hazardous substances whose exceeding limits could have negative impact on human health or natural environment

### Information

The device, as a part of professional CCTV system used for surveillance and control, is not designed for self installation in households by individuals without technical knowledge.

### Excluding of responsibility in case of damaging data on a disk or other devices:

The manufacturer does not bear any responsibility in case of damaging or losing data on a disk or other devices during device operation.

### WARNING!

PRIOR TO UNDERTAKING ANY ACTION THAT IS NOT DESCRIBED FOR THE GIVEN PRODUCT IN USER'S MANUAL AND OTHER DOCUMENTS DELIVERED WITH THE PRODUCT, OR IF IT DOES NOT ARISE FROM THE USUAL APPLICATION OF THE PRODUCT, MANUFACTURER MUST BE CONTACTED UNDER THE RIGOR OF EXCLUDING THE MANUFACTURER'S RESPONSIBILITY FOR THE RESULTS OF SUCH AN ACTION.

## IMPORTANT SAFEGUARDS AND WARNINGS

### **WARNING!**

THE KNOWLEDGE OF THIS MANUAL IS AN INDISPENSIBLE CONDITION OF A PROPER DEVICE OPERATION. YOU ARE KINDLY REQUESTED TO FAMILIARIZE YOURSELF WITH THE MANUAL PRIOR TO INSTALLATION AND FURTHER DEVICE OPERATION.

### **WARNING!**

USER IS NOT ALLOWED TO DISASSEMBLE THE CASING AS THERE ARE NO USER-SERVICEABLE PARTS INSIDE THIS UNIT. ONLY AUTHORIZED SERVICE PERSONNEL MAY OPEN THE UNIT

INSTALLATION AND SERVICING SHOULD ONLY BE DONE BY QUALIFIED SERVICE PERSONNEL AND SHOULD CONFORM TO ALL LOCAL REGULATIONS

1. Prior to undertaking any action please consult the following manual and read all the safety and operating instructions before starting the device.
2. Please keep this manual for the lifespan of the device in case referring to the contents of this manual is necessary;
3. All the safety precautions referred to in this manual should be strictly followed, as they have a direct influence on user's safety and durability and reliability of the device;
4. All actions conducted by the servicemen and users must be accomplished in accordance with the user's manual;
5. The device should be disconnected from power sources during maintenance procedures;
6. Usage of additional devices and components neither provided nor recommended by the producer is forbidden;
7. You are not allowed to use the camera in high humidity environment (i.e. close to swimming pools, bath tubs, damp basements);
8. Mounting the device in places where proper ventilation cannot be provided (e. g. closed lockers etc.) is not recommended since it may lead to heat build-up and damaging the device itself as a consequence;
9. Mounting the camera on unstable surface or using not recommended mounts is forbidden. Improperly mounted camera may cause a fatal accident or may be seriously damaged itself. The camera must be mounted by qualified personnel with proper authorization, in accordance with this user's manual.
10. Device should be supplied only from a power sources whose parameters are in accordance with those specified by the producer in the camera technical datasheet. Therefore, it is forbidden to supply the camera from a power sources with unknown parameters, unstable or not meeting producer's requirements;

Due to the product being constantly enhanced and optimized, certain parameters and functions described in the manual in question may change without further notice. We strongly suggest visiting the [www.novuscctv.com](http://www.novuscctv.com) website in order to access the newest manual

Data included in the following user's manual is up to date at the time of printing. AAT Holding Sp z o.o. holds exclusive rights to modify this manual. The producer reserves the rights for device specification modification and change in the design without prior notice.

## TABLE OF CONTENTS

<b>TABLE OF CONTENTS</b> .....	4
<b>1. FOREWORD INFORMATION</b> .....	5
1.1. General Characteristics.....	5
1.2. NVIP-2DN5000H/IR-1P, NVIP-3DN5000H/IR-1P, NVIP-5DN5000H/IR-1P specification.....	6
<b>2. SPECIFICATION</b> .....	7
2.1. Camera dimension .....	7
2.2. Package contents .....	8
2.3. Layout of important camera items .....	9
<b>3. INSTALLATION</b> .....	10
<b>4. START-UP AND INITIAL CAMERA CONFIGURATION</b> .....	12
4.1. Starting the IP camera .....	12
4.2. Initial configuration via the Web browser.....	13
<b>5. NETWORK CONNECTION UTILIZING WEB BROWSER</b> .....	14
5.1. Recommended PC specification for web browser.....	14
5.2. Connection with IP camera via the web browser .....	14
<b>6. WWW INTERFACE - WORKING WITH IP CAMERA</b> .....	16
6.1. Displaying live pictures.....	16
<b>7. ELECTRIC CONNECTORS AND ACCESORIES</b> .....	18
7.1. Connecting power supply to the camera. ....	18
7.2. SD card installation .....	18
<b>8. RESTORING FACTORY DEFAULTS</b> .....	19
8.1. Restoring software factory defaults .....	19
8.2. Restoring hardware factory defaults in IP cameras .....	19

## FOREWORD INFORMATION

### 1. FOREWORD INFORMATION

#### 1.1. General Characteristics

- Imager resolution: 5.0 megapixels (for NVIP-5DN5000H/IR-1P)  
3.0 megapixels (for NVIP-3DN5000H/IR-1P)  
2.0 megapixels (for NVIP-2DN5000H/IR-1P)
- Mechanical IR cut filter
- IR operation capability
- Min. Illumination from 0.01 lx/F=1.2 (for NVIP-5DN5000H/IR-1P)  
0.005 lx/F=1.2 (for NVIP-3DN5000H/IR-1P)  
0.01 lx/F=1.2 (for NVIP-2DN5000H/IR-1P)
- Digital Slow Shutter (DSS)
- Digital Noise Reduction (DNR)
- Lens type: Auto iris DC, f=3,3 ~ 12mm F=1.2
- Built-in IR illuminator, 10 LEDs
- Privacy zones: 5
- Video compression: H.264, M-JPEG
- Max video processing resolution: 2592x1944 (for NVIP-5DN5000H/IR-1P)  
2048x1536 (for NVIP-3DN5000H/IR-1P)  
1920x1080 (for NVIP-2DN5000H/IR-1P)
- Triple streaming: compression, resolution, speed and quality defined individually for each video stream
- RTSP protocol support for video transmission
- Pre & post-alarm functions
- Hardware motion detection
- Built-in webserver camera configuration through the website
- MicroSD/microSDHC card support
- Wide range of responses to alarm events: e-mail with attachment, saving file on FTP server, saving file on microSD/microSDHC card, saving file on NAS
- Network protocol support : HTTP, TCP, IPv4/v6, UDP, FTP, DHCP, NTP, RTSP, PPoE, SMTP
- Software: NMS (NOVUS MANAGEMENT SYSTEM) for video recording, live monitoring, playback and remote IP devices administration
- Power supply: 12VDC, PoE (Power over Ethernet)

eng

## FOREWORD INFORMATION


### 1.2. NVIP-2DN5000H/IR-1P, NVIP-3DN5000H/IR-1P, NVIP-5DN5000H/IR-1P specification

	NVIP-2DN5020H/IR-1P	NVIP-3DN5020H/IR-1P	NVIP-5DN5020H/IR-1P
IMAGE			
Pick-up Element	2.0 MPX, matryca CMOS, 1/2.8"	3.0 MPX, matryca CMOS, 1/3"	5.0 MPX, matryca CMOS, 1/2.5"
Number of Effective Pixels	1920 (H) x 1080 (V)	2048 (H) x 1536 (V)	2592 (H) x 1920 (V)
Min. Illumination	0.1 lx/F=1.2 – color mode, 0.01 lx/F=1.2 – color DSS, 0 lx (IR on)	0.5 lx/F=1.2 – color mode, 0.005 lx/F=1.2 – color DSS, 0 lx (IR on)	0.5 lx/F=1.2 – color mode, 0.01 lx/F=1.2 – color DSS, 0 lx (IR on)
Digital Slow Shutter (DSS)	x 5		
Digital Noise Reduction (DNR)	Yes		
LENS			
Type	Auto iris D, f=3.3 ~ 12 mm/F=1.2		
Angle of View (H)	85° ~ 35°	71° ~ 29°	88° ~ 36°
DAY/NIGHT			
Type	Mechanical IR cut filter		
Switching Mode	Auto/manual		
NETWORK			
Stream Resolution	1920 x 1080 (HD 1080p), 1280 x 720 (HD 720p), 640 x 360	2048 x 1536 (QXGA), 1920 x 1080 (HD 1080p), 1280 x 720 (HD 720p), 640 x 480 (VGA), 640 x 360	2592 x 1944, 2048 x 1536 (QXGA), 1920 x 1080 (HD 1080p), 1280 x 720 (HD 720p), 640 x 480 (VGA), 640 x 360
Frame Rate	30 fps for 1920 x 1080 and other resolutions	20 fps for 2048 x 1536 30 fps for 1920 x 1080 and other resolutions	10 fps for 2592 x 1920, 20 fps for 2048 x 1536, 30 fps for 1920 x 1080 and other resolutions
Multistreaming Mode	3 streams		
Video/Audio Compression	H.264, M-JPEG/G.711, RAW_PCM		
Number of Simultaneous Connections	Max. 10		
Network Protocols Support	HTTP, POP/IP, IPv4/v6, UDP/IP, RTSP, FTP, DHCP, NTP, PPoE, SMTP		
PC Software	NOVUS NMS, Internet Explorer, Google Chrome, Opera, Mozilla Firefox		
OTHER FUNCTIONS			
OSD	IE/Chrome/Opera/Firefox browser, Polish, English, Russian		
Privacy Zones	5		
Motion Detection	Yes		
Prealarm/Postalarm	5 MB/86400 sec.		
System Reaction to Alarm Events	E-mail with attachment, saving file on: FTP server/SD card, NAS drive		
IR LED			
Number	10		
Range	20 m		
Angle	90°		
INTERFACES			
Video Output	RCA - maintenance only		
Audio Input/Output	1 x RCA/1 x RCA		
Network Interface	1 x Ethernet - RJ-45 interface, 10/100 Mbit/s		
Memory Card Slot	Yes		
INSTALLATION PARAMETERS			
Dimensions (mm)	69 (Ø) x 265,5 (dł)		
Weight	820 g		
Enclosure	Aluminium, white, mounting bracket with cable and sunshield in-set included		
Power Supply	PoE, 12 VDC		
Power Consumption	5 W, 12.9 W (IR on)		
Operating Temperature	-10°C ~ 55°C		
Degree of Protection	IP 66		

## SPECIFICATION

### 2. SPECIFICATION

#### 2.1. Camera dimensions

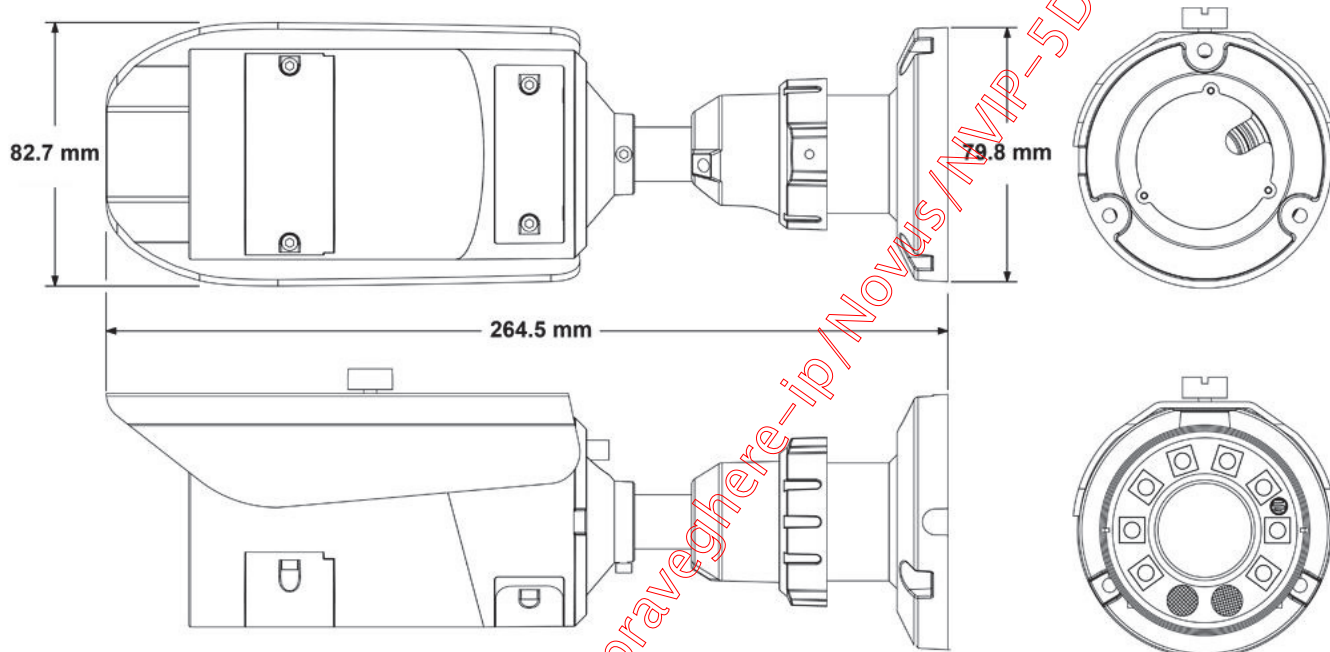



eng



## SPECIFICATION

### 2.2. Package contents

After you open the package make sure that the following elements are inside:

- IP camera,
- Mounting Screw Kit
- RJ45 Coupler, 
- BNC Test Cable, 
- Mounting Template,
- Short version of user's manual,
- CD containing manual and software.

If any of this elements has been damaged during transport, pack all the elements back into the original box and contact your supplier for further assistance.

### CAUTION!



If the device was brought from a location with lower temperature, please wait until it reaches the temperature of location it is currently in. Turning the device on immediately after bringing it from a location with lower ambient temperature is forbidden, as the condensing water vapour may cause short-circuits and damage the device as a result.

Before starting the device familiarize yourself with the description and the role of particular inputs, outputs and adjusting elements that the device is equipped with.



## SPECIFICATION

### 2.3. Layout of important camera items

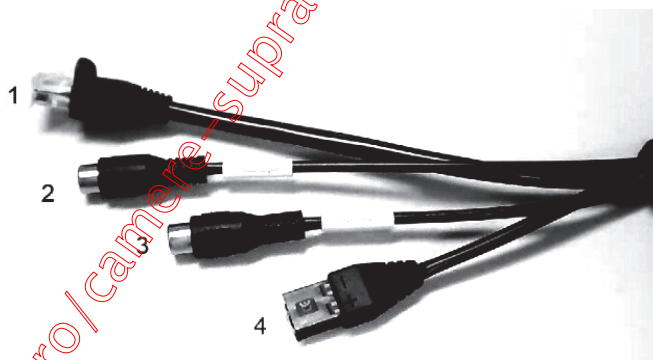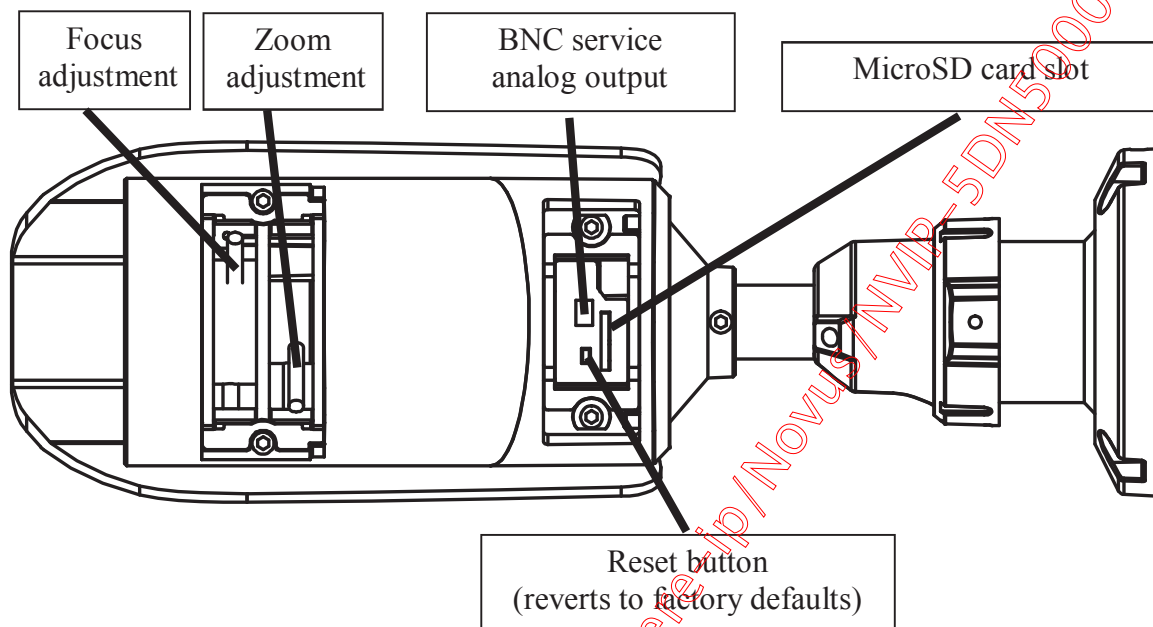

#### 1. RJ45 Network Interface: (PoE supported).

*Information:*

*Use the included RJ45 coupler to connect to male end of RJ45 Ethernet cable.*

#### 2. Audio Input (RCA): Connect to a self-powered microphone for listen-in audio.

#### 3. Audio Output (RCA): Connect to an amplifier or self-powered speaker for intercom/2-way audio.


#### 4. DC12V: 12V DC power input.

**NOTICE:** Make sure to follow correct polarity (+/-) marked on the power connector when connecting to power.


## INSTALLATION

### 3. INSTALLATION

- Put mounting drawing paper to the wall or ceiling and mark drill holes.
- Drill holes using markings.
- Drill additional hole for video and power cables.
- Put video and power cables through a previously drilled hole in the wall/ceiling.
- Using mounting screws from the package, attach the plate of camera to the ceiling/wall.

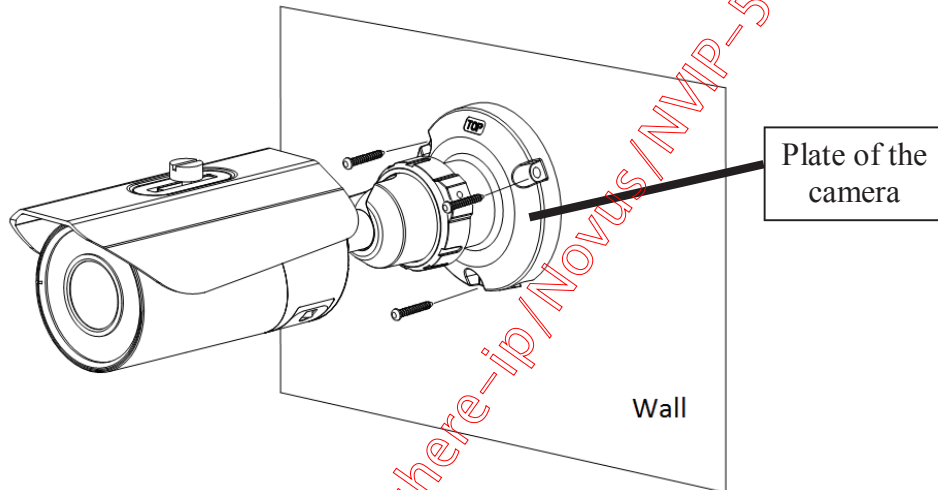


- Unscrew the service compartment screws and open the service compartment. Connect the BNC test cable to video output and monitor.

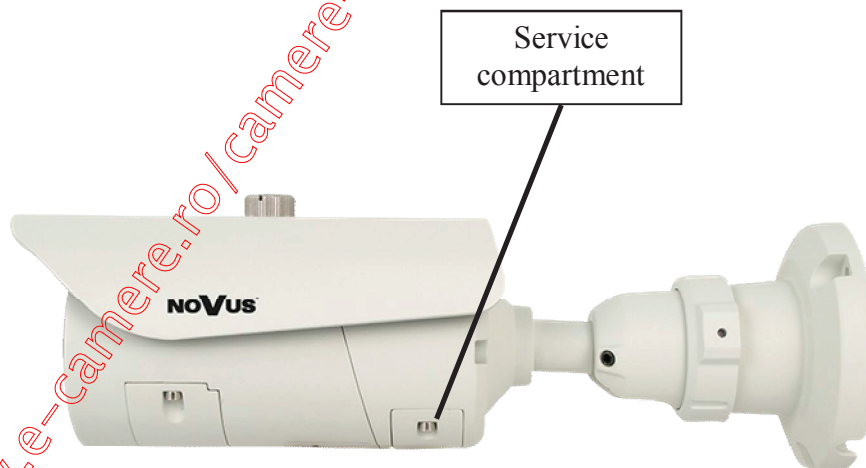


## INSTALLATION

- Unscrew the locking screw and the stopping ring, and then manually point the camera in a desired direction to obtain a desired scene view.

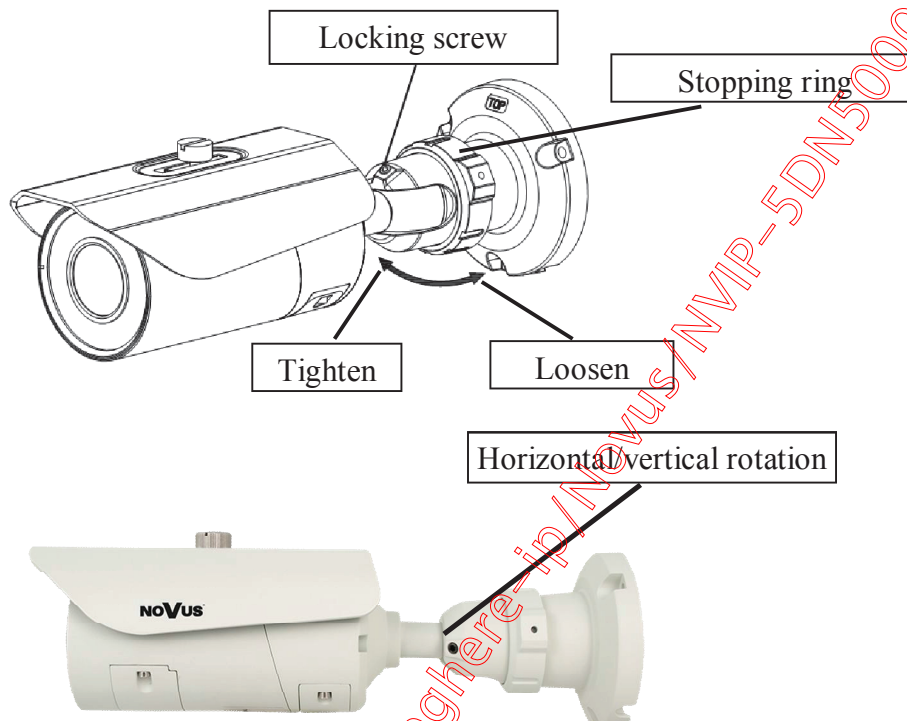

- Firmly screw the locking screw and the stopping ring.
- Adjust the camera zoom and focus as needed. It is recommended to check focus settings in infrared illumination and make correction in colour mode to have proper focus in both modes.

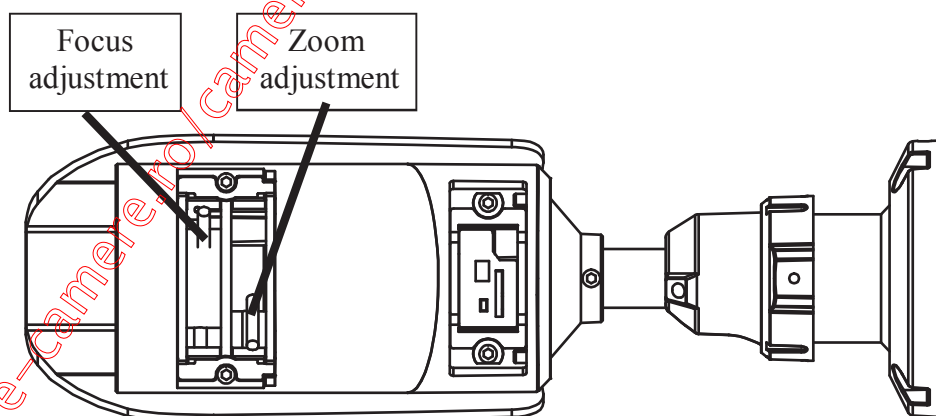

- Close the service compartment and firmly screw the service compartment screws.

## START-UP AND INITIAL CAMERA CONFIGURATION

### 4, START-UP AND INITIAL CAMERA CONFIGURATION

#### 4.1. Starting the IP camera


To run NOVUS IP camera you have to connect ethernet cable between camera and network switch with PoE support (IEEE 802.3af).

You can also connect it directly via power supply adapter with parameters compatible with camera power supply specification.


After connecting power supply initialization process is started, which takes about 2 minutes.

The recommended way to start an IP camera and perform its configuration is connect directly to the network switch which is not connected to other devices. To obtain further information about network configuration parameters (IP address, gateway, network mask, etc.) please contact your network administrator.

- Connection utilising network switch with PoE support

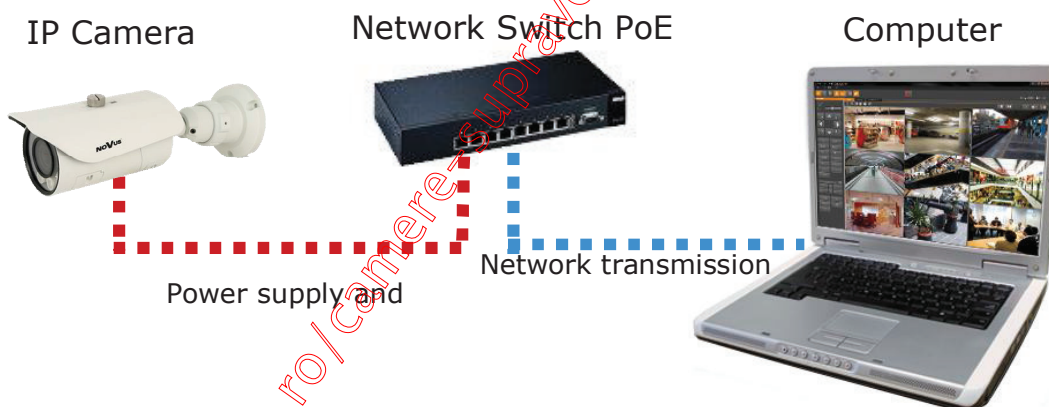


- Connection utilising external power supply and network switch

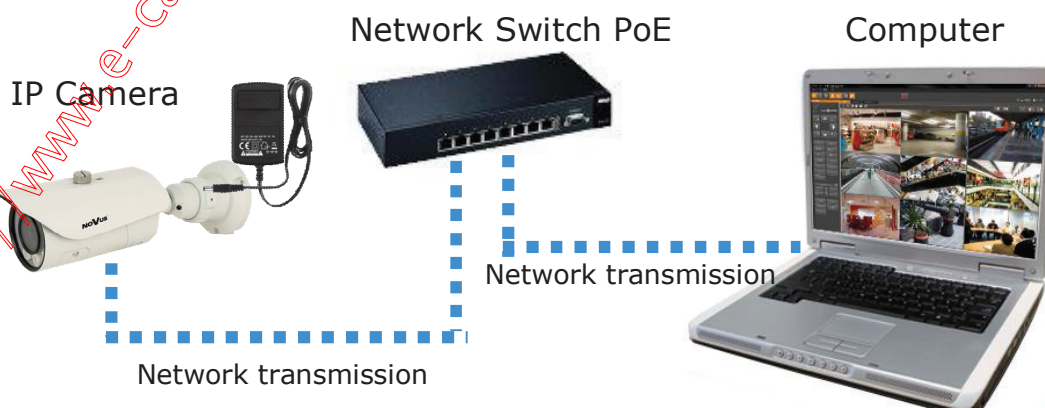

## START-UP AND INITIAL CAMERA CONFIGURATION

- Connection utilising external power supply directly to the computer

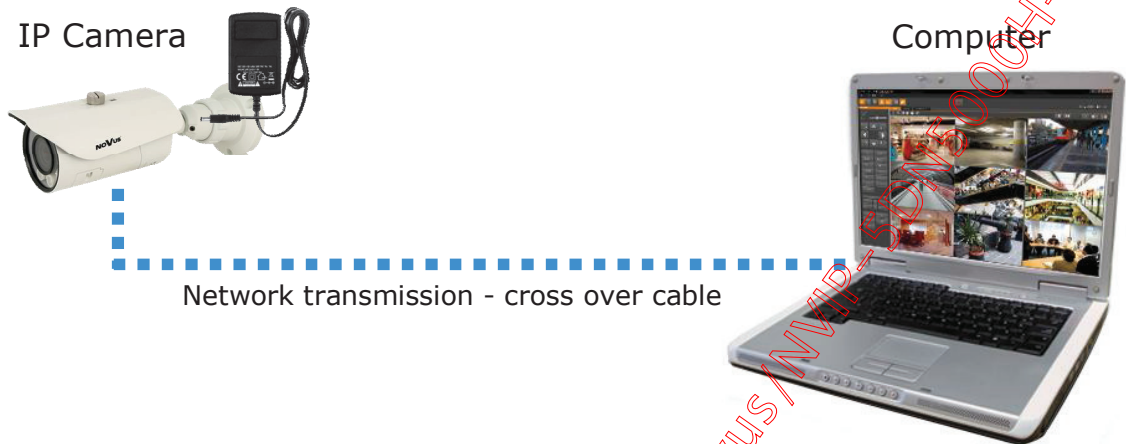

eng

### Information:

Power supply adapter is not included. Please use power adapter with parameters specified in user 'smanual.

### Caution:

In order to provide protection against voltage surges/lightning strikes, usage of appropriate surge protectors is advised. Any damages resulting from surges are not eligible for service repairs.

### 4.2. Initial configuration via the web browser

The default network settings for NVIP-2DN5000H/IR-1P, NVIP-3DN5000H/IR-1P, NVIP-5DN5000H/IR-1P IP cameras are :

1. IP address= **192.168.1.200**
2. Network mask - **255.255.255.0**
3. Gateway - **192.168.1.1**
4. User name - **root**
5. Password - **pass**

Knowing the camera's IP address you need to appropriately set PC IP address, so the two devices can operate in one network subnet ( e.g. for IP 192.168.1.1, appropriate address for the camera ranges from 192.168.1.2 to 192.168.1.254, for example 192.168.1.60). It is not allowed to set the same addresses for camera and PC computer

You can either set a network configuration (IP address, gateway, net mask, etc.) of NOVUS IP camera yourself or select DHCP mode (DHCP server is required in this method in target network) by using web browser or by NMS software. When you use DHCP server check IP address lease and its linking with camera MAC address to avoid changing or losing IP address during device operation or network/DHCP server breakdown. You have to remember to use a new camera IP address after changing network parameters.

After network setting configuration has been done, the camera can be connected to a target network.

## NETWORK CONNECTION UTILIZING WEB BROWSER

### 5. NETWORK CONNECTION UTILIZING WEB BROWSER


#### 5.1. Recommended PC specification for web browser connections

Requirements below apply to connection with an IP camera, assuming image display in 1920x1080 resolution and 25 fps speed.

1. CPU **Intel Pentium IV 3 GHz** or newer
2. **RAM** Memory min. **512 MB**
3. VGA card (any displaying **Direct 3D** with min. **128 MB RAM** memory)
4. OS **Windows XP / Windows Vista / Windows 7 / Windows 8**
5. **Direct X** version **9.0** or newer
6. Network card **10/100/1000 Mb/s**

#### 5.2. Connection with IP camera via the web browser

You have to enter camera IP address in the Internet browser address bar. If IP address is correct user login window will be displayed:

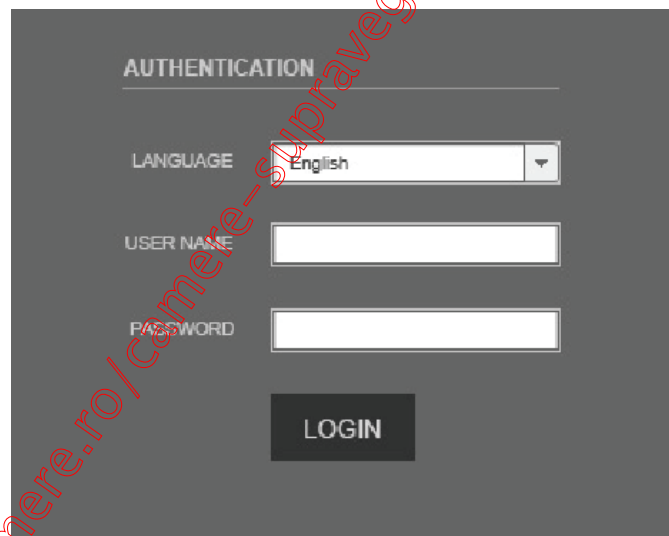

Default user is **root** and default password is **pass**.

In the *Language* box you can change the display language (English, Polish or Russian). The default language is English.

For safety reasons, it is recommended to change default user name and password.

It is possible to connect to the camera using Internet Explorer, Mozilla Firefox, Chrome or Opera browsers. Running the IP camera in this browsers are very similar.



## NETWORK CONNECTION UTILIZING WEB BROWSER


If your computer has Flash Player installed, the main screen for the camera web interface opens. From here you can view and configure the camera.

**NOTE:** If your computer does not have Flash Player installed, you will be prompted to select if you would like to use ActiveX or Flash Player to connect to the camera:

[Click here to shift playing live video with short delay widget!](#)



- Click [Click here to shift playing life video with short delay widget!](#) to play live video with ActiveX control to reduce latency (recommended): Uses an ActiveX plug-in to connect to the camera. To install the plug-in, click on the video area, and select [Install this Add-on for all users on this computer](#), and follow the prompts.

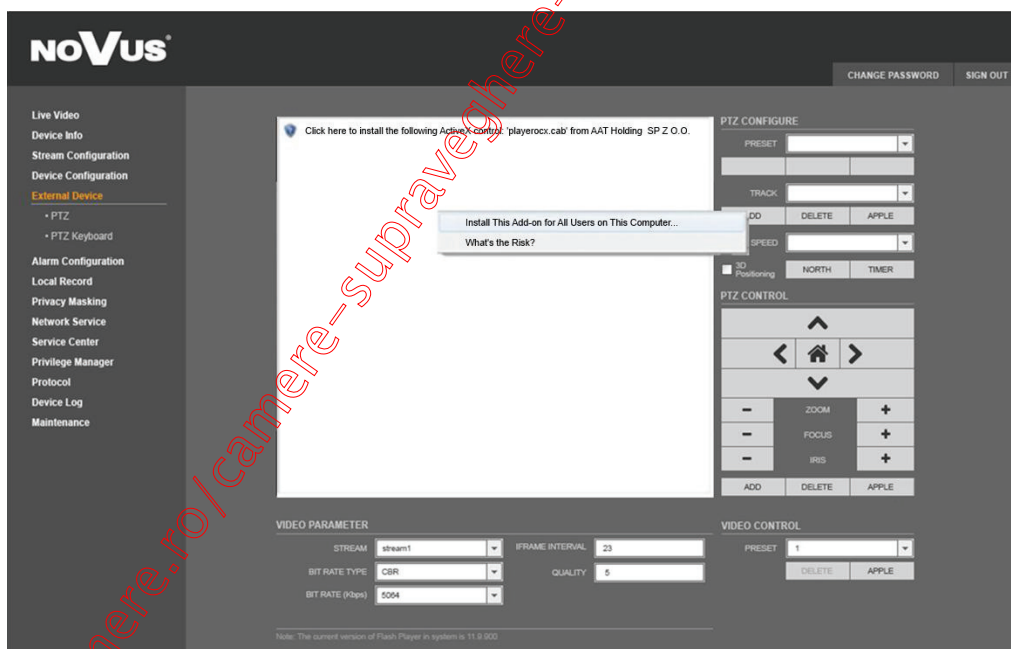

**NOTE:** Please open the *Security settings* of IE browser, and enable the *Download unsigned ActiveX controls*.

- Click [Please download the latest version of Flash Player](#) to play live video: Opens a link to download Flash Player from Adobe's website. After completing the installation, restart your browser and reconnect to the camera.


**NOTE:** When working in Windows Vista/7/8 the ActiveX applet may be blocked by Windows Defender or User account control. In such case you should allow to run this applet, or simply disable these functions.



## WWW INTERFACE - WORKING WITH IP CAMERA

### 6. WWW INTERFACE - WORKING WITH IP CAMERA

#### 6.1. Displaying live pictures

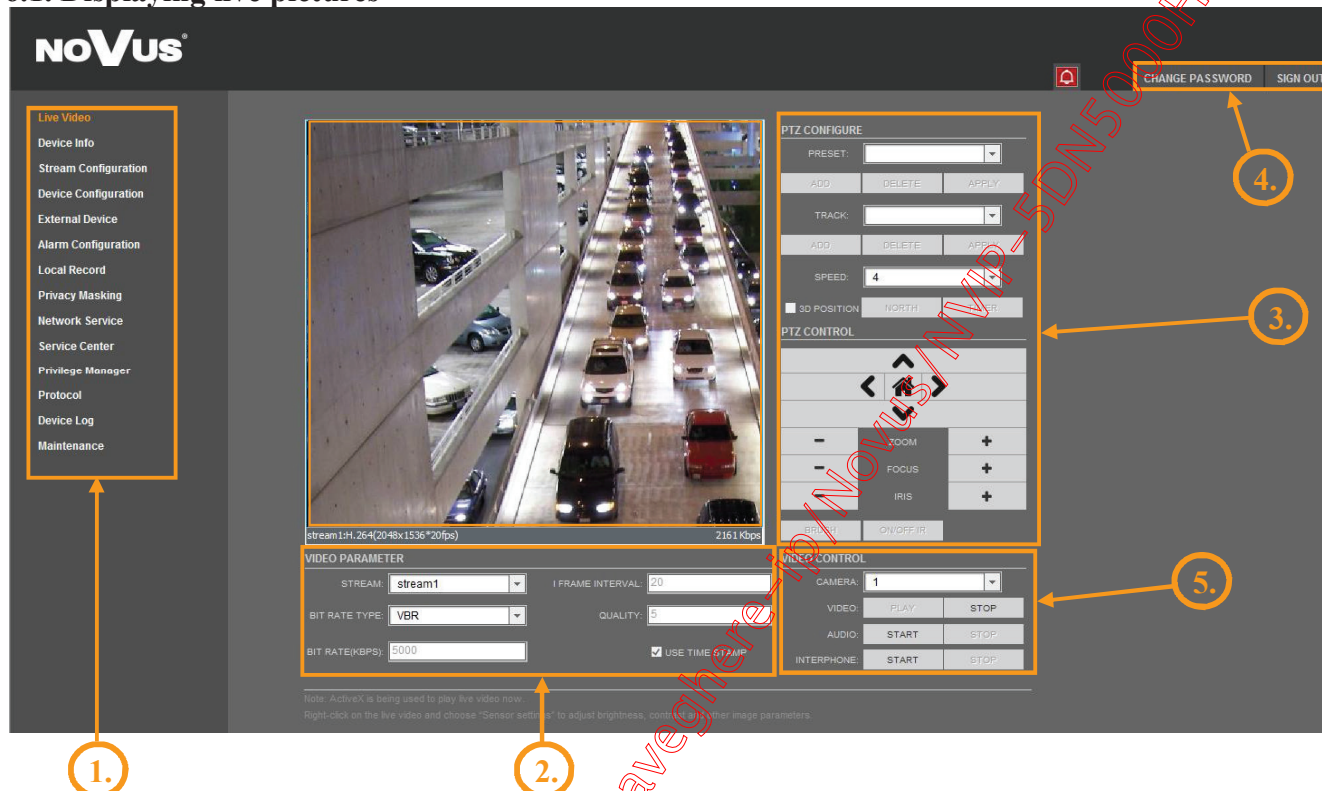

#### 1. Camera settings

Live Video	- Live video preview
Device Info	- Device information
Stream Configuration	- Video and audio settings for each stream
Device Configuration	- Device configuration (e.g. Local Network, Date&Time)
External Device	- External device configuration (function unavailable)
Alarm Configuration	- Alarm Configuration (Motion alarm, Alarm I/O)
Local Record	- Local Record Configuration
Privacy Masking	- Configuration up to 5 privacy masks
Network Service	- Network services configuration (e.g. DDNS)
Service Center	- Service center configuration (e.g. SMTP)
Privilege Manager	- Users and groups management
Protocol	- Protocols settings (e.g. ONVIF)
Device Log	- Device Log contains: Operation Log, Alarm Log and Collect Log
Maintenance	- Device Restart and restoring Default Settings

## WWW INTERFACE - WORKING WITH IP CAMERA

### 2. Video Parameter

Stream	- Stream ID (choose one from available streams)
Bite Rate Type	- Bit rate type
Bit Rate (kbps)	- Bit rate
I Frame Interval	- I frame interval
Quality	- Quality
USE TIME STAMP	- Video buffer (increases delay when enabled, maximum delay is 5s)

NOTICE: *USE TIME STAMP* function will not be available when using Flash instead of Activex.

### 3. Camera Control

Function unavailable.

### 4. Menu bar

Change Password	- Change users password
-----------------	-------------------------

NOTICE: Default password "pass" can be restored only after restoring default settings of the camera)

Sign Out	- Log out from camera
----------	-----------------------

### 5. Video Control

Camera	- Default number of the camera is 1.
Video	- Turn on/off video
Audio	- Turn on/off audio
Interphone	- Turn on/off Interphone

NOTICE: *Audio and Interphone* functions will not be available when using Flash instead of Activex.

## ELECTRIC CONNECTORS AND ACCESORIES

### 7. ELECTRIC CONNECTORS AND ACCESORIES

#### 7.1. Connecting power supply to the camera.

The camera is supplied by using RJ45 network socket. To run NOVUS IP camera you have to connect ethernet cable between camera and network switch with PoE support (IEEE 802.3af). You can also use a power injector compatible with IEEE 802.3af standard.

*Information:*

*Power supply adapter is not included. Please use power adapter with parameters specified in user's manual.*


#### **Caution:**

**In order to provide protection against voltage surges/lightning strikes, usage of appropriate surge protectors is advised. Any damages resulting from surges are not eligible for service repairs.**

#### 7.2. SD card installation

Camera supports microSD and microSDHC cards. In order to install the card properly, please follow the instructions below:

- Turn the camera off.
- Unscrew the service compartment screws and open the service compartment.
- Mount microSD/microSDHC card in the socket located at the camera's rear, according to the picture:

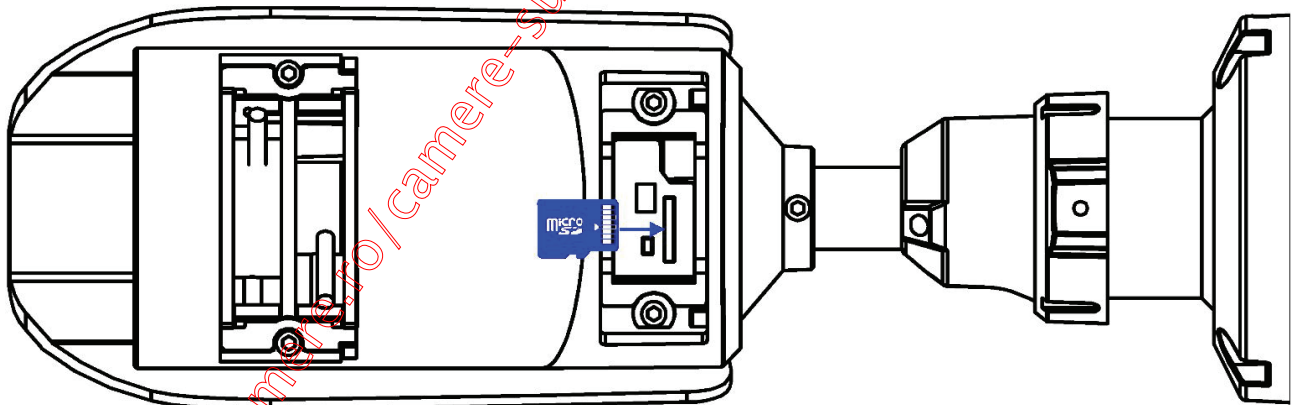

- Close the service compartment and firmly screw the service compartment screws.
- Turn the camera on
- Format the card in SDVideo (recommended) or Ext3 file system using a IP camera.

Click *Local Record* -> *Record Directory*. Under *Disk Name*, select *SD1*. Click *Modify*. The *Record Disk Path* menu opens. Uncheck *Enable*. Under *File System*, select *SDVideo* or *Ext3*. Click *Format*.

A window will appear to show the status of the formatting. Wait for the formatting to complete and then click *OK*.

- Check the SD card by checking its capacity in the *Local Record* -> *Record Directory* tab.

## RESTORING FACTORY DEFAULTS

### 8. RESTORING FACTORY DEFAULTS

NOVUS IP cameras allow to restore defaults via:

- software (web browser level) resetting the camera settings
- hardware (using reset) restores factory defaults.

#### 8.1. Restoring software factory defaults

Factory software default restores default settings of the IP camera (optional except network settings). The camera re-starts then, taking about one minute to complete. Option to restore the factory default is described in *MAINTENANCE -> DEFAULT SETTINGS* tab.

#### 8.2. Restoring hardware factory defaults in IP cameras

In order to restore factory defaults for the camera please follow the instructions:

- unscrew the service compartment screws and open the service compartment,
- press the *RESET* button and hold on for 5 seconds,
- release button,
- log on after approx. 1 minute using default IP address (<http://192.168.1.200>) and default user name (root) and password (pass),
- close the service compartment and firmly screw the service compartment screws.

